

1. Plug UST white update version box in pc and run exe



2. Box will be detected as update version, now select the correct port and press Calibrate box



3. After calibration software will ask for old UST dongle, insert the dongle on back port of UST box and press ok (please install the old dongle driver before pressing ok)



4. after pressing ok , box will be calibrate successfully , now u can remove ust dongle and run exe again ..

